 


INSTALLATION INSTRUCTION

YZ2402_US1.2

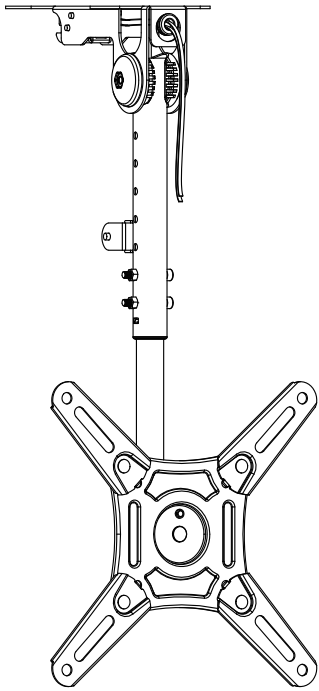

If you have any questions, please feel free to contact our customer support before returning.

Safety Caution

 
Please read this instruction carefully before installation. Also check your TV owner's manual to see if there are any special requirements for mounting your TV. If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.

- This product is designed for use in solid concrete wall, wood joist or cabinet board.
- **DO NOT install into drywall alone.**
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Incorrect installation may result in product damage / property damage or body injury.
- We shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.


WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!

Must Check Before Getting Started

Verify Your TV Specifications:

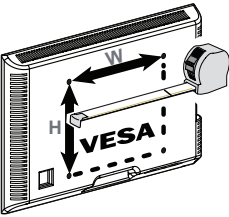


 VESA Pattern (W x H):
MIN: 75mm x 75mm (3" x 3")
MAX: 200mm x 200mm (8" x 8")

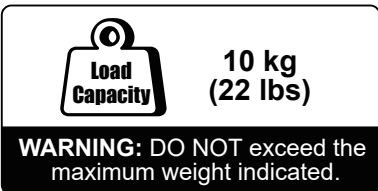


WARNING: DO NOT exceed the maximum weight indicated.

 
Verify Your Wall Construction:

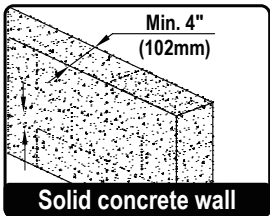

 CAUTION:
Avoid potential personal injuries and property damage!
Mount the wall plate assembly directly onto the concrete surface (no surface covering).

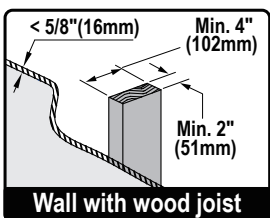

 
CAUTION:
Avoid potential personal injuries and property damage!
Drywall covering the wall must not exceed 5/8 in. (16 mm).
Minimum wood stud size: nominal 2 x 4 in. (51 x 102 mm) actual 1 1/2 x 3 1/2 in. (38 x 89 mm).

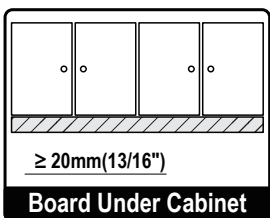

  
CAUTION:
Avoid potential personal injuries and property damage!
Board under cabinet must exceed 13/16 in. (20 mm).



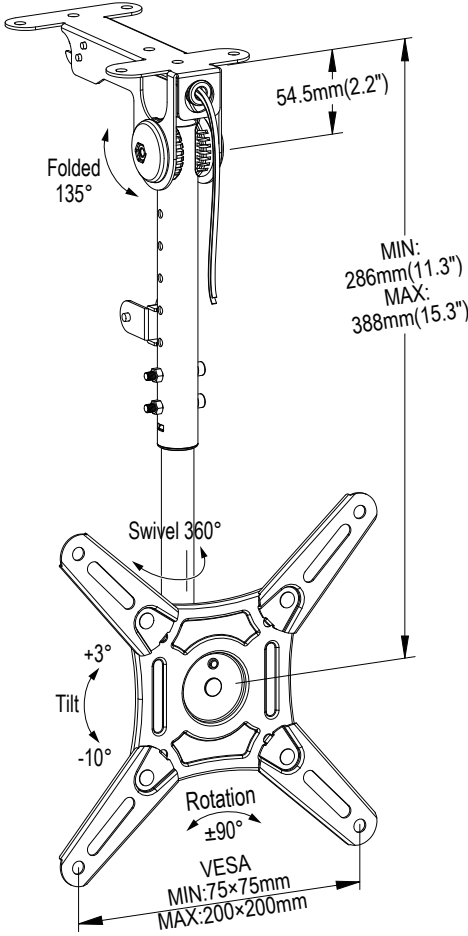


 
 

CAUTION: DO NOT install into drywall alone.


 

 
 
 


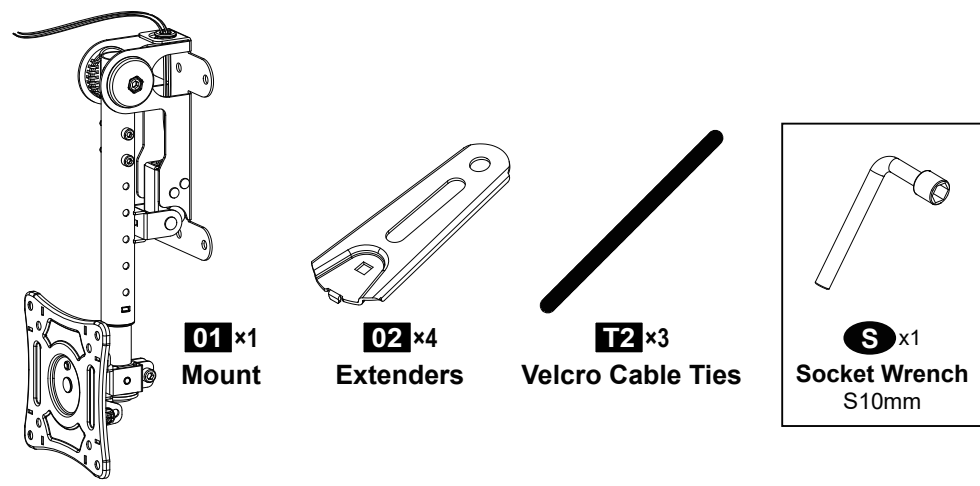
Product Dimensions



Supplied Parts and Hardware




 A x4 Screws ST6.3x16mm	 B x2 Lag Bolt ST6.3x60mm	 C x4 Anchor Bolt Φ10x48mm	 D x4 Bolts M5x10mm	 E x4 Nuts M5	 F1 x1 Open-end Wrench S8-S10mm
					 F2 x1 Allen Key 4mm
					 F3 x1 Allen Key 5mm

TV									
Philips Screws M4x12mm	Philips Screws M4x30mm	Philips Screws M6x15mm	Philips Screws M6x30mm	Philips Screws M8x25mm	Philips Screws M8x45mm	Washers Φ6mm (M4-M6)	Spacers H10mm (M4-M8)	Spacers H5mm (M4-M8)	
 MA x4	 MB x4	 MC x4	 MD x4	 ME x4	 MF x4	 MG x4	 MH x8	 MI x8	



NOTE: Not all parts and hardware included will be used.

 Extra Tools You Need (Not Supplied)

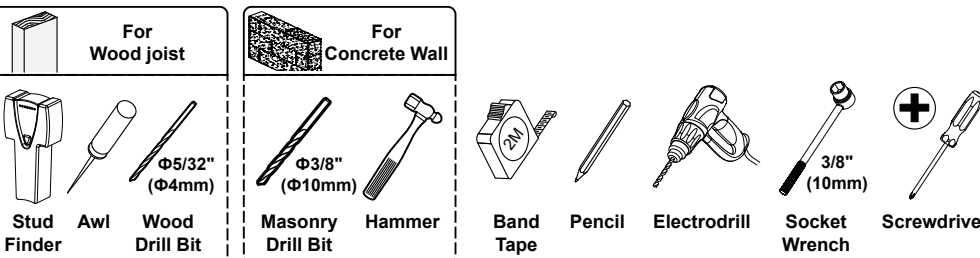


1 Assemble the Mount

  1-1 Assemble the Extension Arm to Appropriate Position

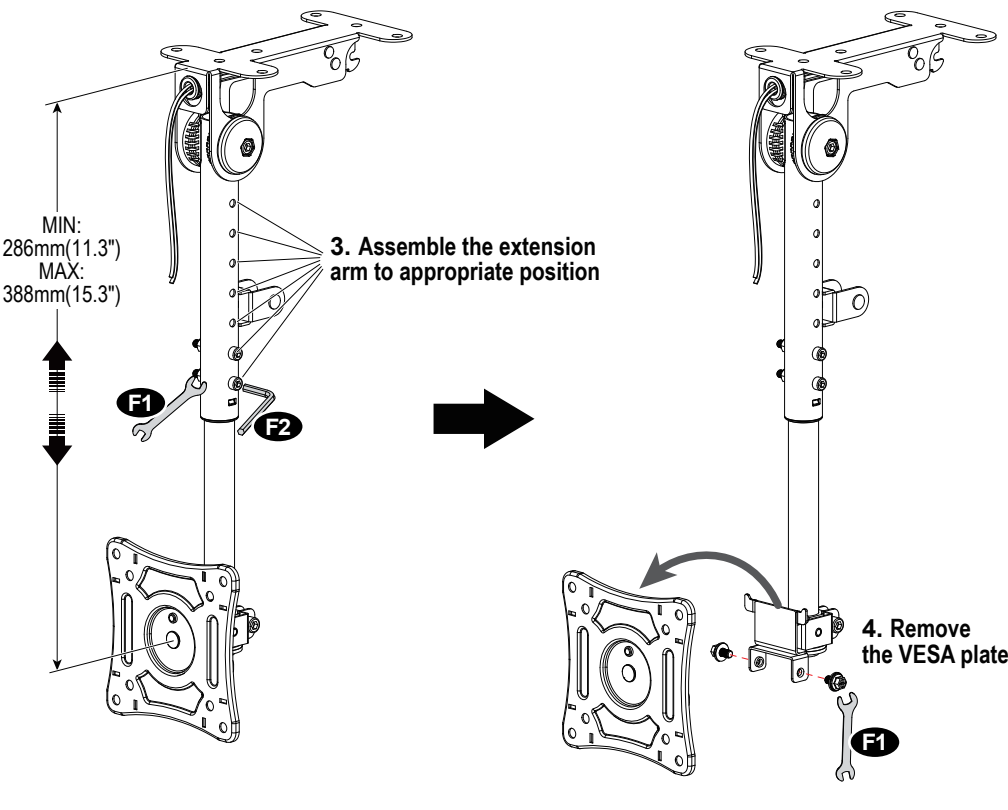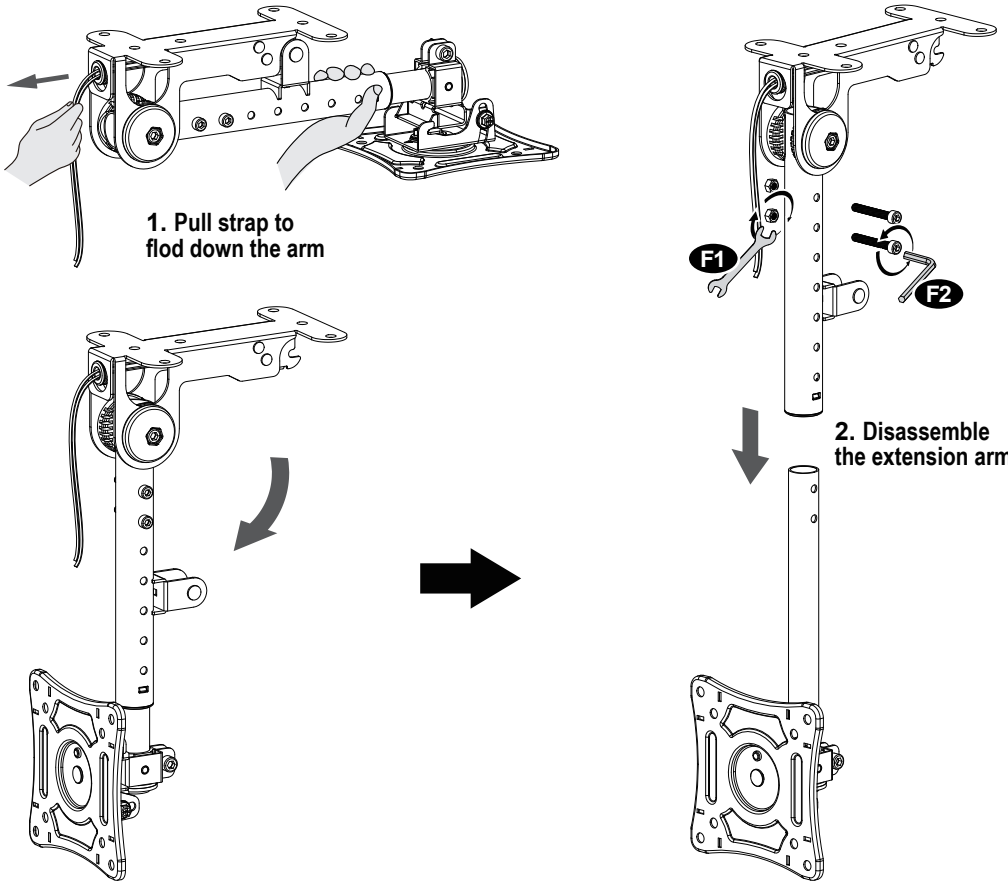


1-2 Assemble VESA Plate and Extenders (When VESA > 100mm)

 If your TV hole pattern is greater than 100x100mm, attach extenders (02) to VESA plate using bolts (D) and nuts (E).

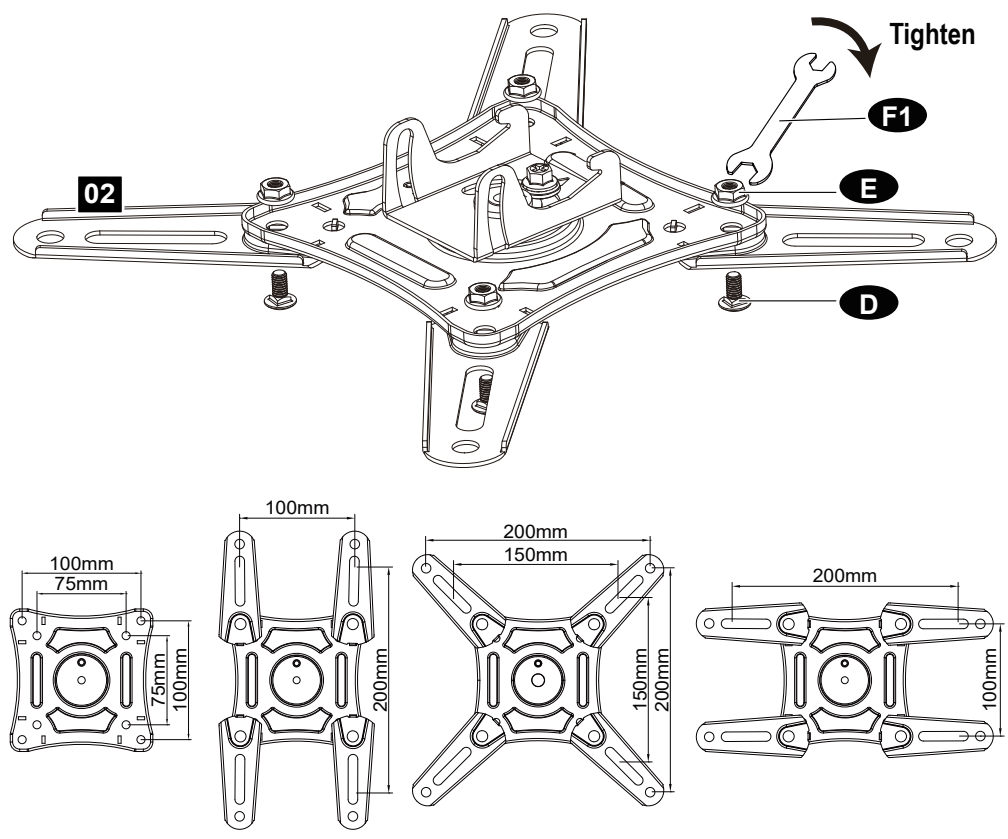


2 Attach VESA Plate to TV

 2-1 Select TV Screws

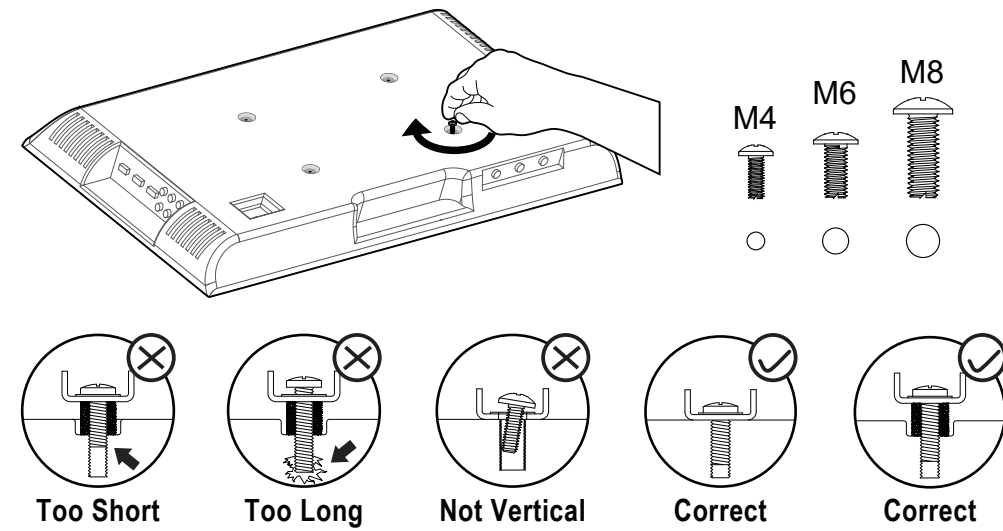


2-2 Need Spacer?

 
I Yes, choose the appropriate screws, washers, and spacers for your TV.

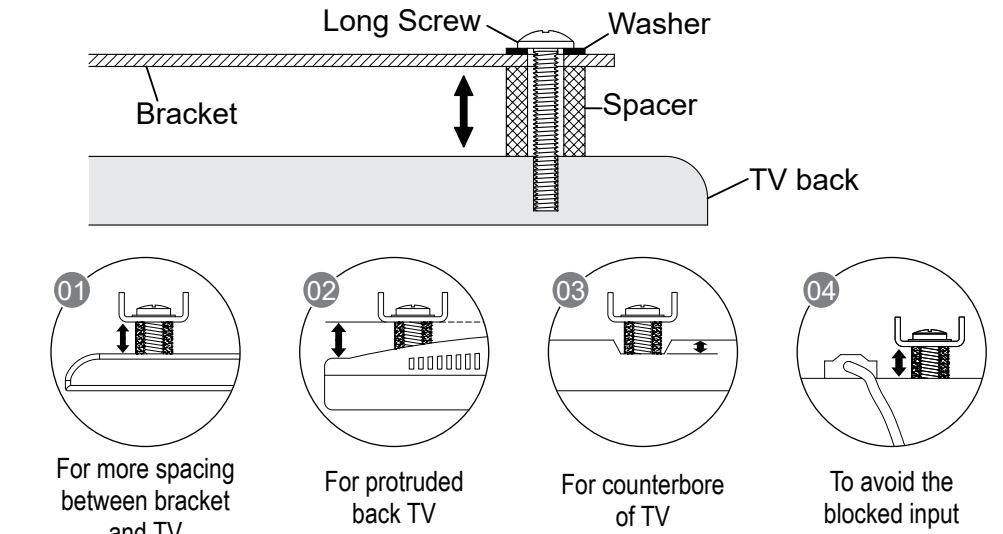

II No, just choose the screws, washers.




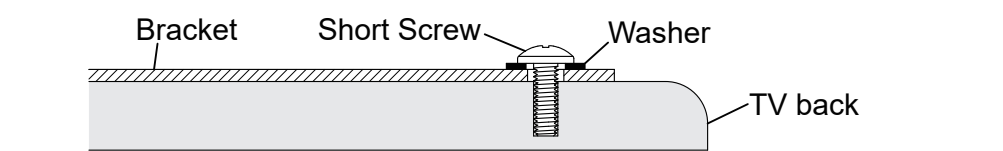 


2-3 Attach VESA Plate to TV

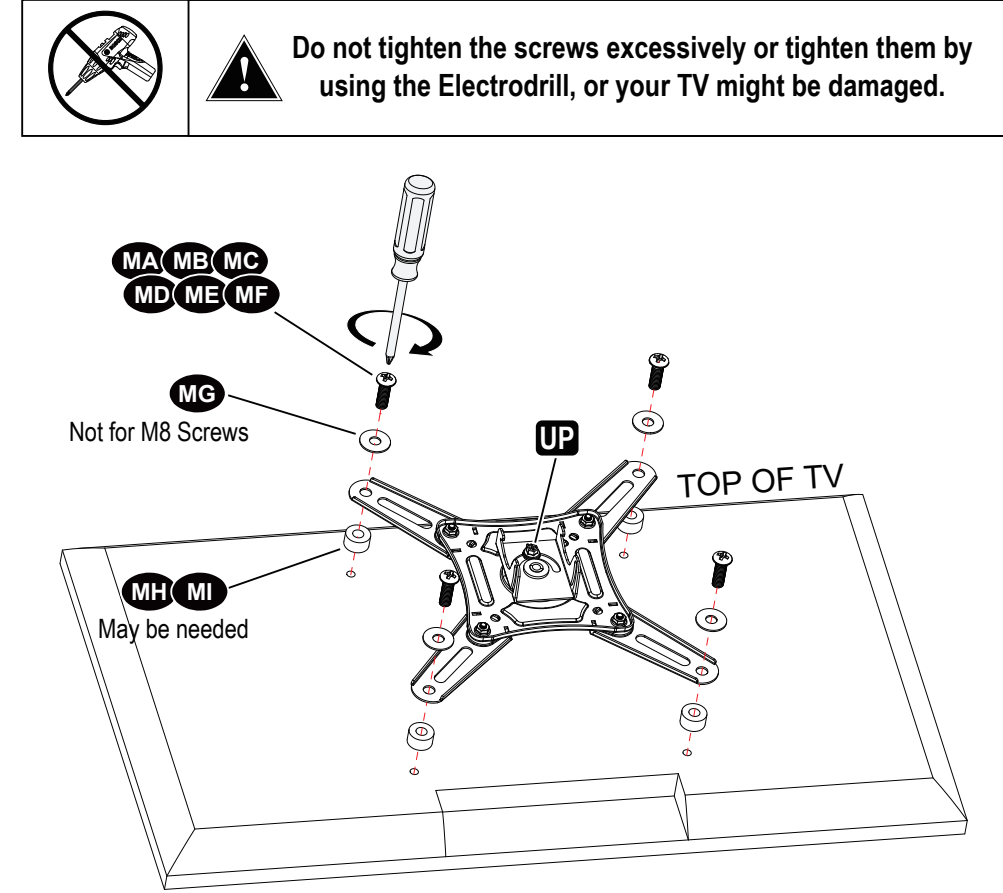 

3-A Attach Wall Plate to Wall

 
 
 
 
OPTION A:
Solid Concrete Wall Installation

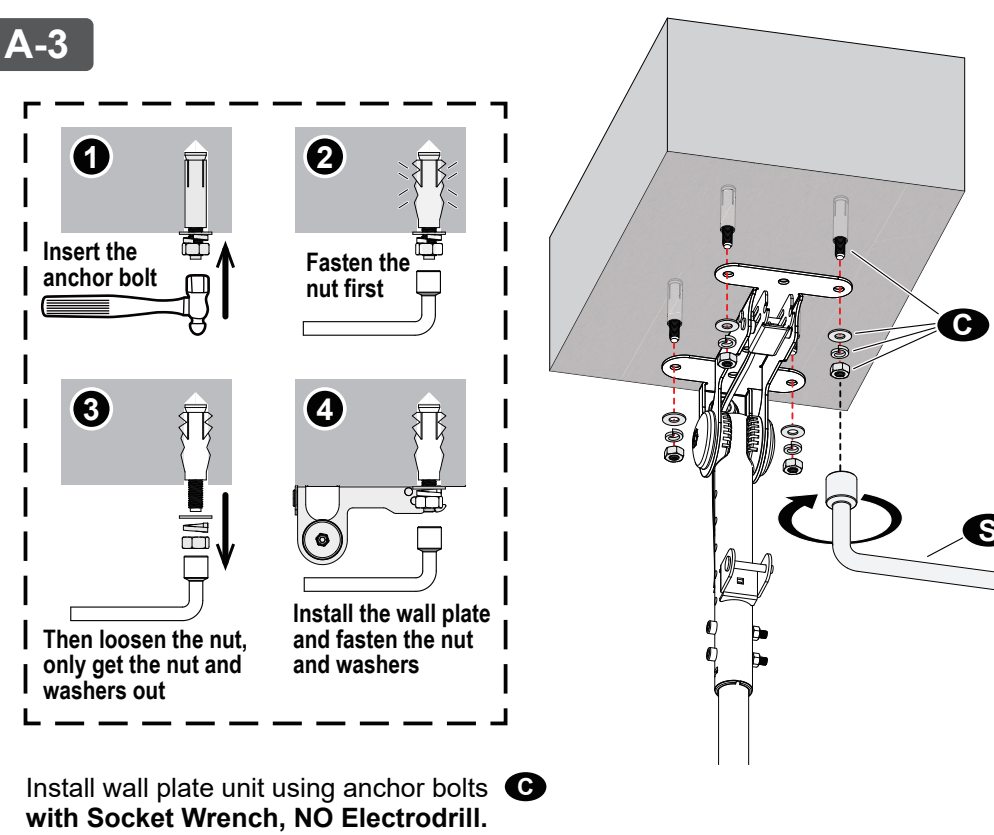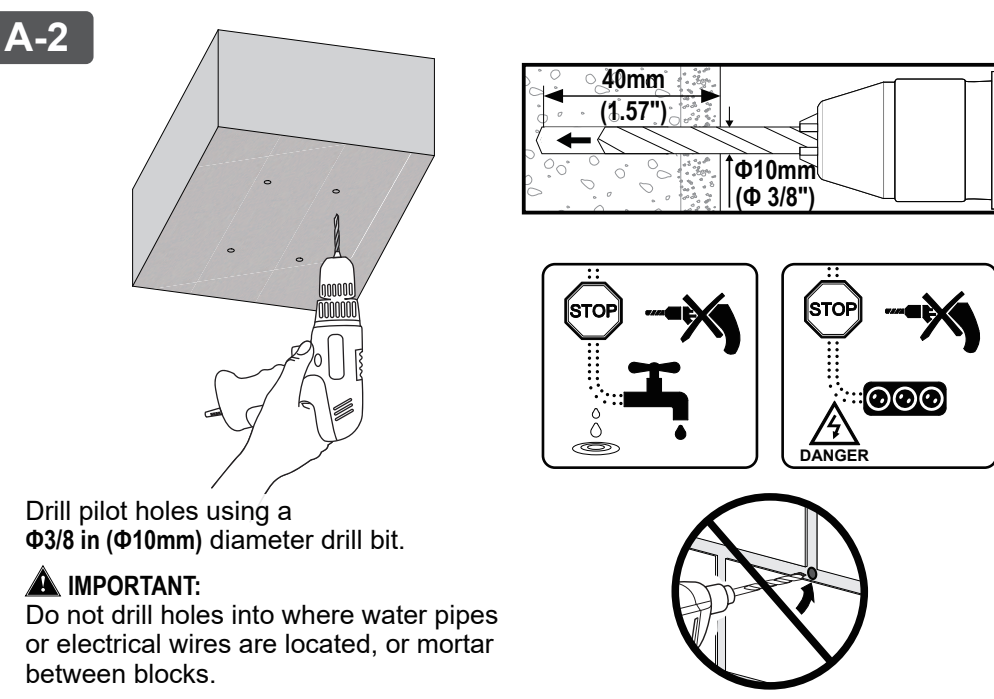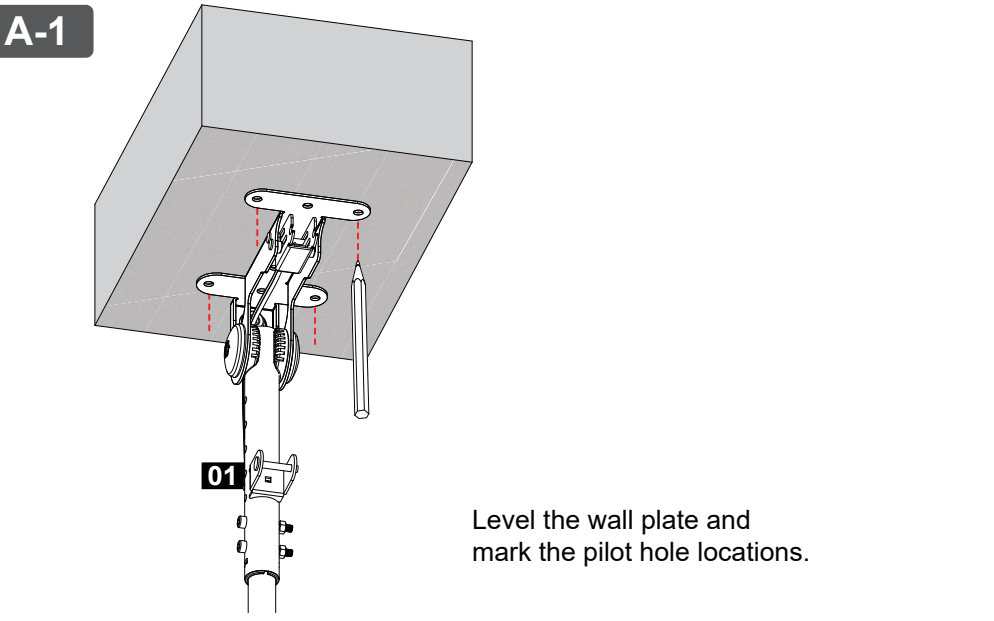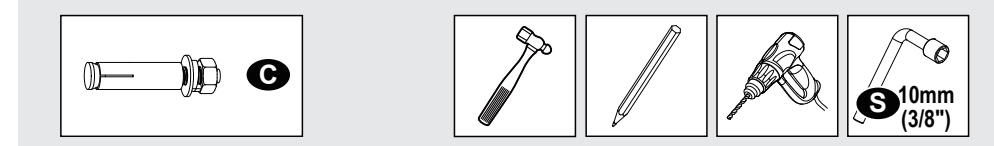

CAUTION:
To avoid potential personal injury or property damage:
All 4 anchor bolts **C** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

3-B Attach Wall Plate to Wall

 
 
 
 
OPTION B:
Wood Joist Installation

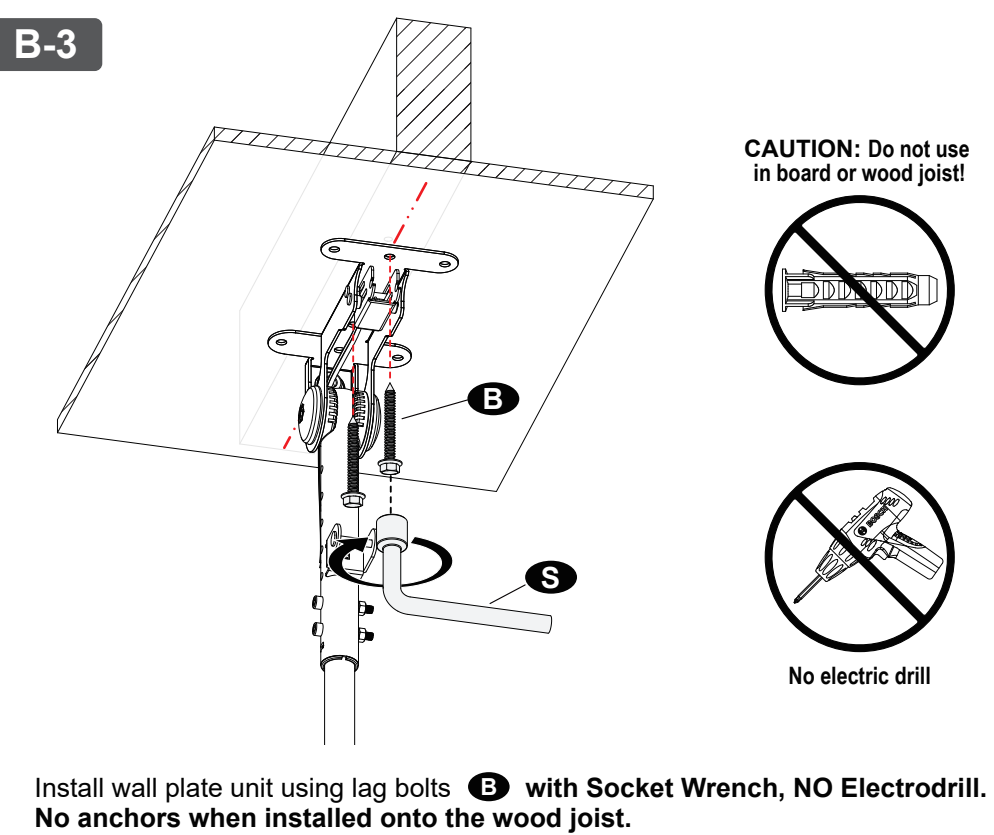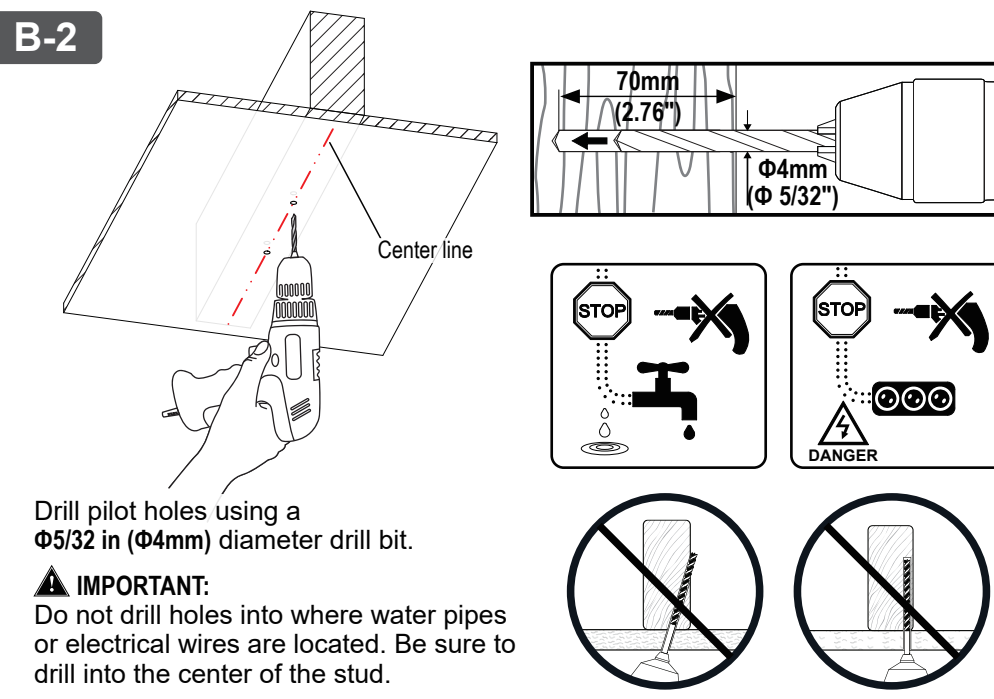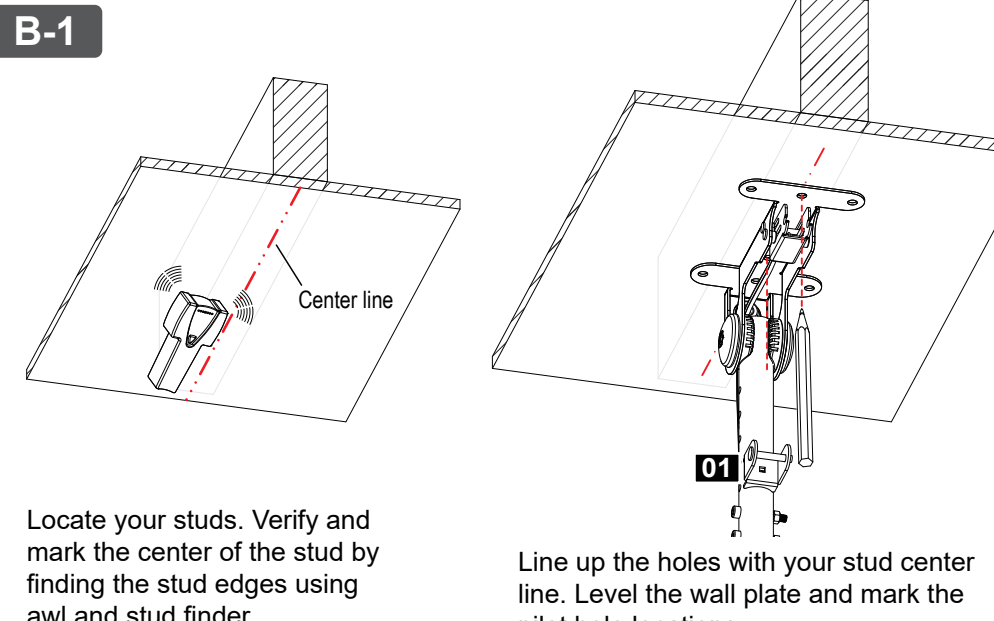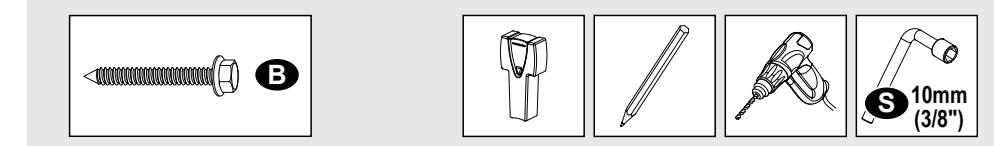

CAUTION:
To avoid potential personal injury or property damage:
All 2 lag bolts **B** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the joist before continuing on to the next step.


3-C Attach Wall Plate to Wall

    OPTION C:
Under Cabinet Installation

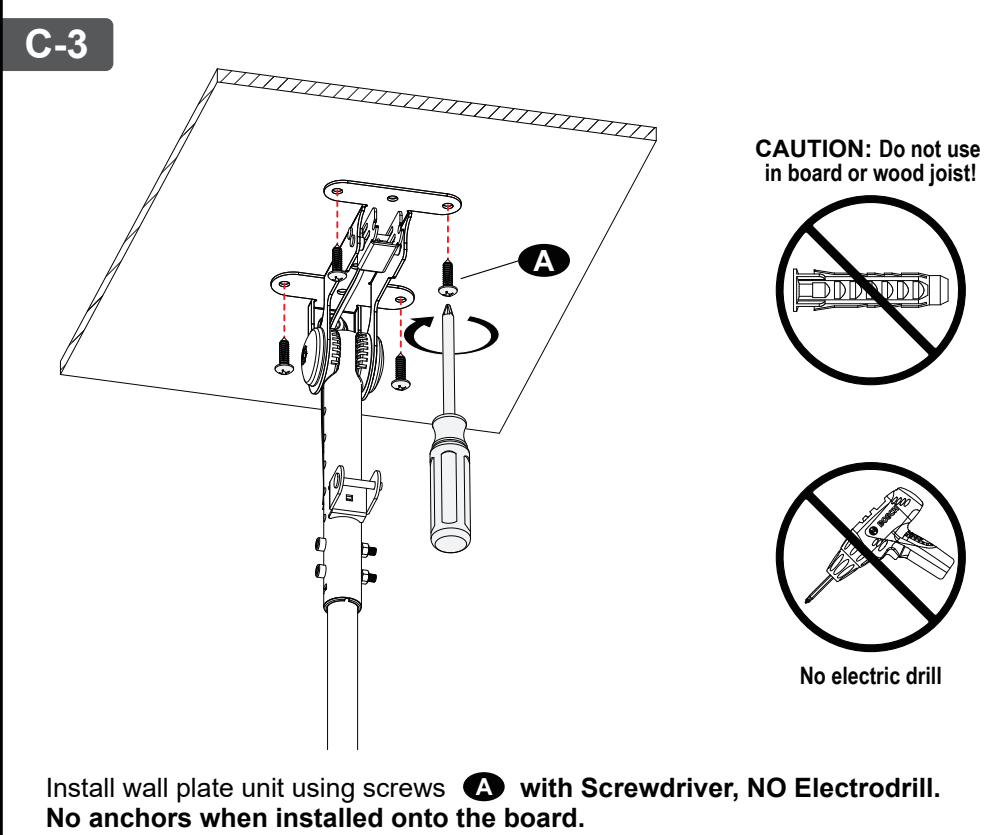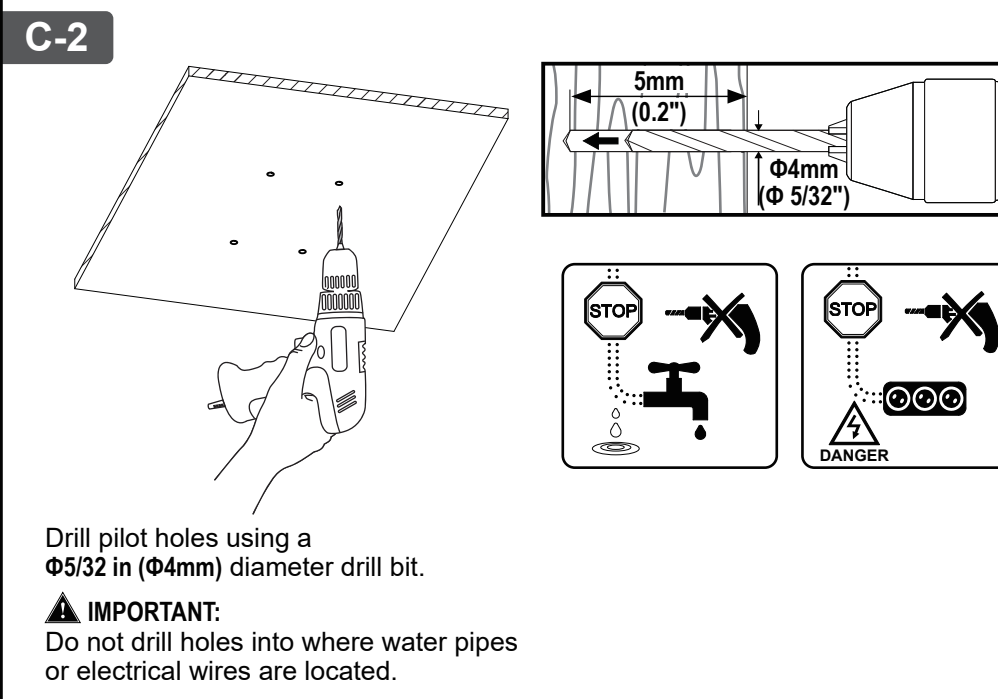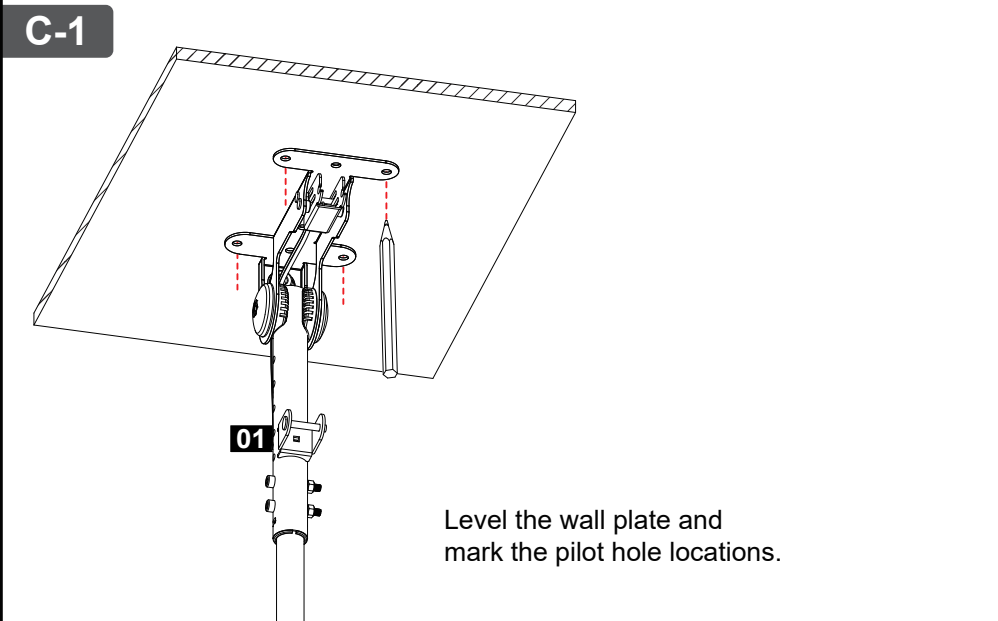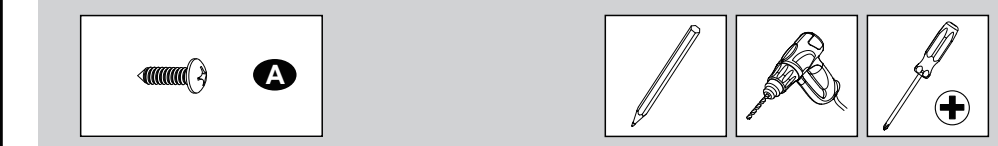

CAUTION:
To avoid potential personal injury or property damage:
All 4 screws **A** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the cabinet before continuing on to the next step.

 4 Hang and Secure TV to Wall Plate

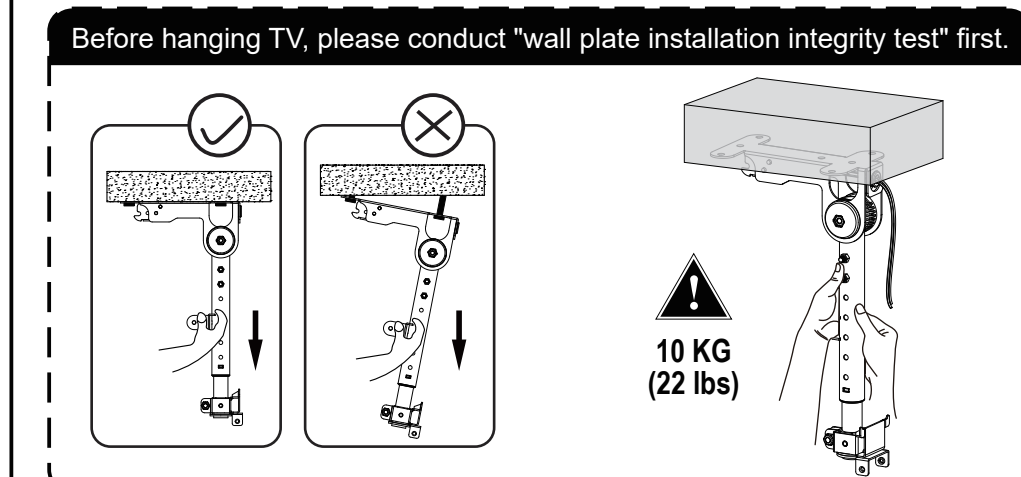

1. Hang TV assembly onto the mount.
2. Secure TV assembly with the pre-assembled screws.

